




# KIT Warning Labels (EN/FR)

100382

 <p><b>Installation and servicing of Danfoss Turbocor® compressors by qualified and product trained personnel only. Follow these instructions and sound refrigeration/electrical/servicing practices relating to installation, commissioning, maintenance and service.</b></p>			
<p>Consult the appropriate Danfoss Turbocor Compressors Inc. (DTC) Service Manual on <a href="http://turbocor.danfoss.com">turbocor.danfoss.com</a> for detailed service instructions.</p>	<p><b>Never power compressor without covers in place and secured.</b></p> <p><b>Removing the mains input cover will expose you to a voltage hazard of up to 575V. Ensure the mains input power is off and locked out before removing cover.</b></p> <p><b>Before removing top cover, wait at least 20 minutes after isolating AC power to allow the high voltage capacitors to discharge.</b></p>	<p>Always wear appropriately rated safety equipment when working around equipment and/or components energized with high voltage.</p> <p><b>This equipment contains hazardous voltages that can cause serious injury or death.</b></p>	<p><b>Recover all refrigerant from compressor in accordance with local codes and ensure pressure is fully vented before the removal of refrigerant containing components.</b></p>

1 - Introduction:


WARNING LABELS (EN/FR) installation instructions. The following instruction includes how to install English/French warning labels on all TT/TG compressors that already have warning labels in a language different from English or French. The label change should be performed prior to the commissioning of the compressor.

2 - Suggested Tools:

No tools are required for the installation of the warning labels.

3 - Application Instructions:

1. Locate the existing warning labels on the Top Cover, Mains Input Cover, and Service Cover. Refer to Figure 1 (Warning Label Locations).

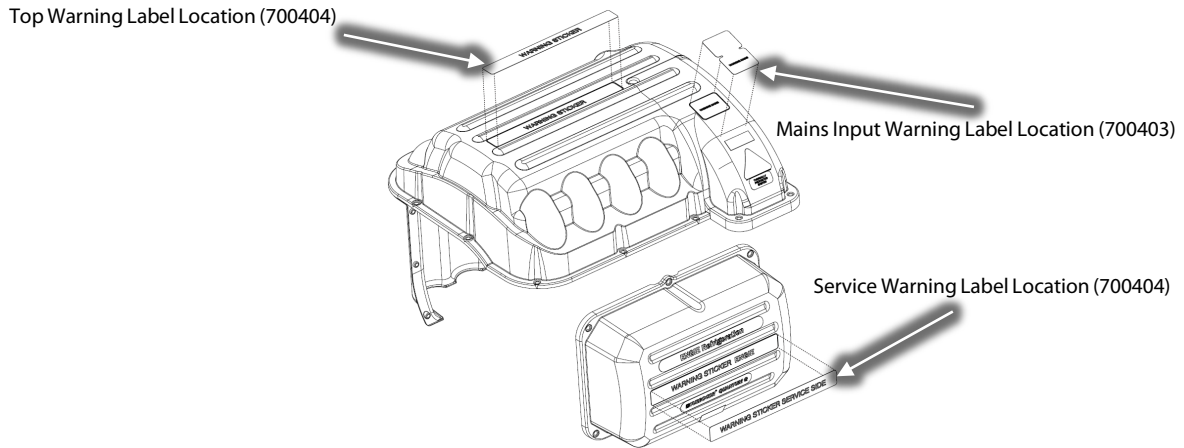

**Figure 1 – Warning Label Locations**

2. Ensure the surface of the current label is clean and free of any oil.  
**NOTE:** It may be necessary to use a solvent (e.g., alcohol) to clean the current label surface.
3. Remove the backing from the new warning label.  
**NOTE:** The part number of each label is printed on the left-side border of each sticker.
  - Mains Input warning label is part number 700403
  - Service Side warning label is part number 700404
  - Top Side warning label is part number 700404
4. Adhere the warning label over the existing label. Be sure that the label is in the same orientation and location as the current label as shown in Figure 1 (Warning Label Locations).
5. Gently rub over the label to ensure it is properly adhered to the compressor housing.
6. Repeat Steps 2-5 for the remaining labels until all three (3) stickers are applied.

4 - Kit Contents:

QTY	Part(s) Description	Picture(s)
200	Service Side Warning Label (EN/FR) (700404)	
100	Mains Input Warning Label (EN/FR) (700403)	

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.